


The Pipe Cover is to be installed after the Continuous Flow water heater has been installed. Pipe cover is supplied colour matched to the water heater. The pipe cover is designed to be installed underneath the water heater to cover the pipe work and valves, but cannot cover the external GPO.

## The kit contains:

- 1. Pipe cover housing
- 2. Pipe cover access panel

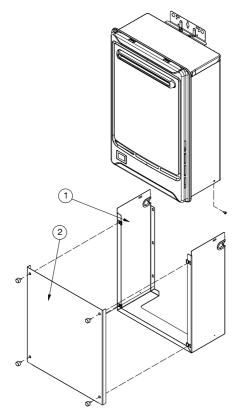



## MODEL

299426 suitable for 12-26L/min 299425 suitable for 27L/min

